



## How to update firmware on X102 player


### Description

This guide explains how to update the firmware of a X102 player.

# Requirements


- Workstation (PC or Laptop)
- Arm logic V3 burning tool
- USB to USB cable which supports data transfer

1. Download the ArmLogic tools, firmware and licence from the following URL:  
[Arm logic tools.](#)
2. Install the Arm Logic tools found in the downloaded folder (V3\_setup\_V3.2.0.exe).
3. Copy the folder 'Licence' from the downloaded folder and past it inside the installation folder of the Arm Logic tools.  
By default: C:\Amlogic\Aml\_Burn\_Tool\V3

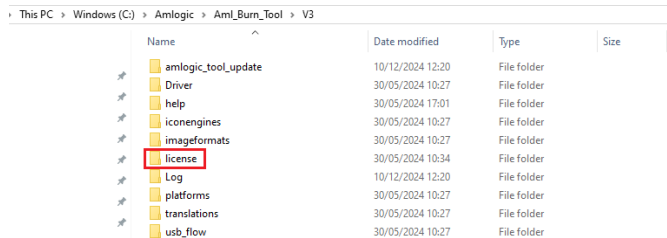


4. Open the Arm Logic tool (Aml\_Burn\_Tool.exe).

In case the language is not set to English yet, select the third tab in the top and select the second option. (Restart the application after this change).

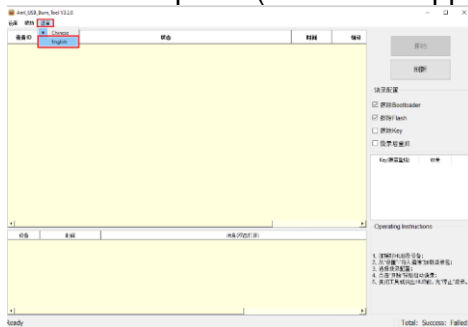


5. Upload the firmware by selecting the tab 'Settings' in the top of the window, click on 'Load Img' and select the firmware from the downloaded folder in step 1.

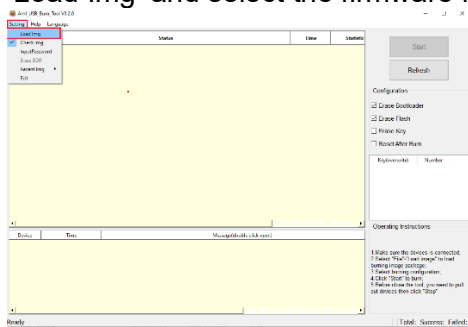


6. Locate the 'AV-OUT' input on the player (there should be a small button inside the input).




7. Press and hold the button inside this input while connecting the UBS cable to the device (Use 'USB-2' port) until the Arm Logic tools shows a connected device.

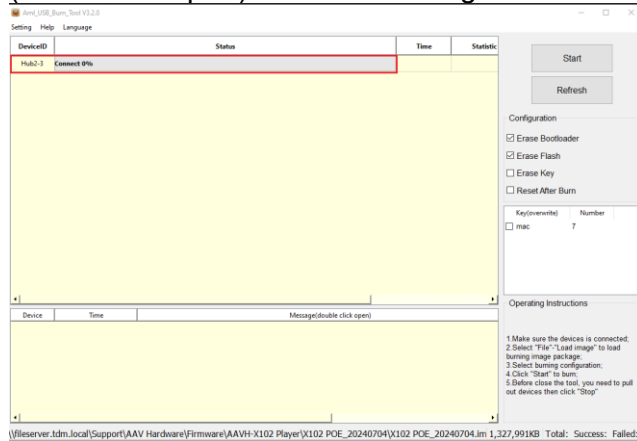

8. Select the 'Start' button to update the firmware.

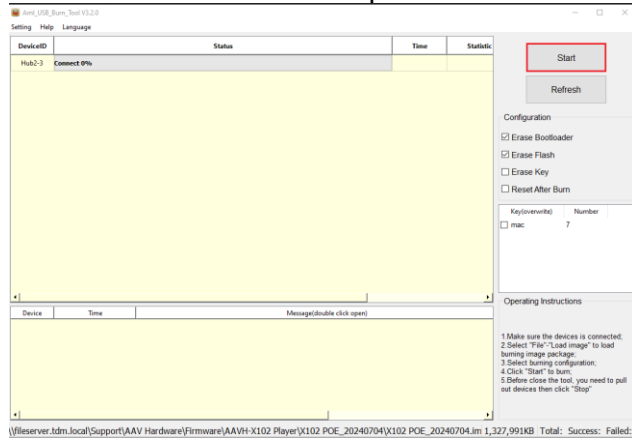

9. Wait until the firmware is updated and press 'Stop' before disconnecting the device.

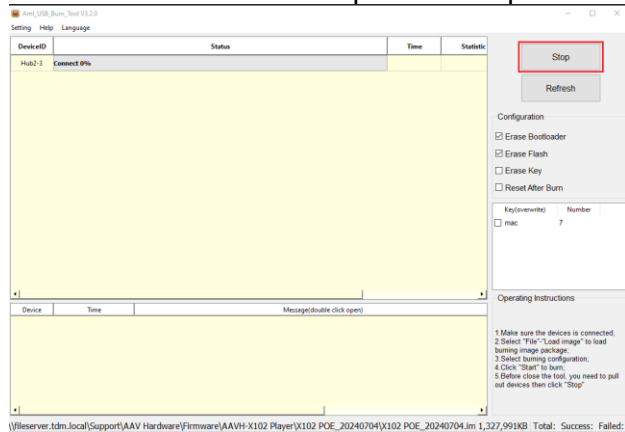

After pressing 'Stop', disconnect the device.

You have now successfully updated the firmware of the X102 player.

SONY



For more information  
visit [pro.sony/TEOS](https://pro.sony/TEOS)

© 2024 Sony Corporation